 


Model • Typen • Modèles

RL21, RL26, RL27

RL31, RL36, RL37

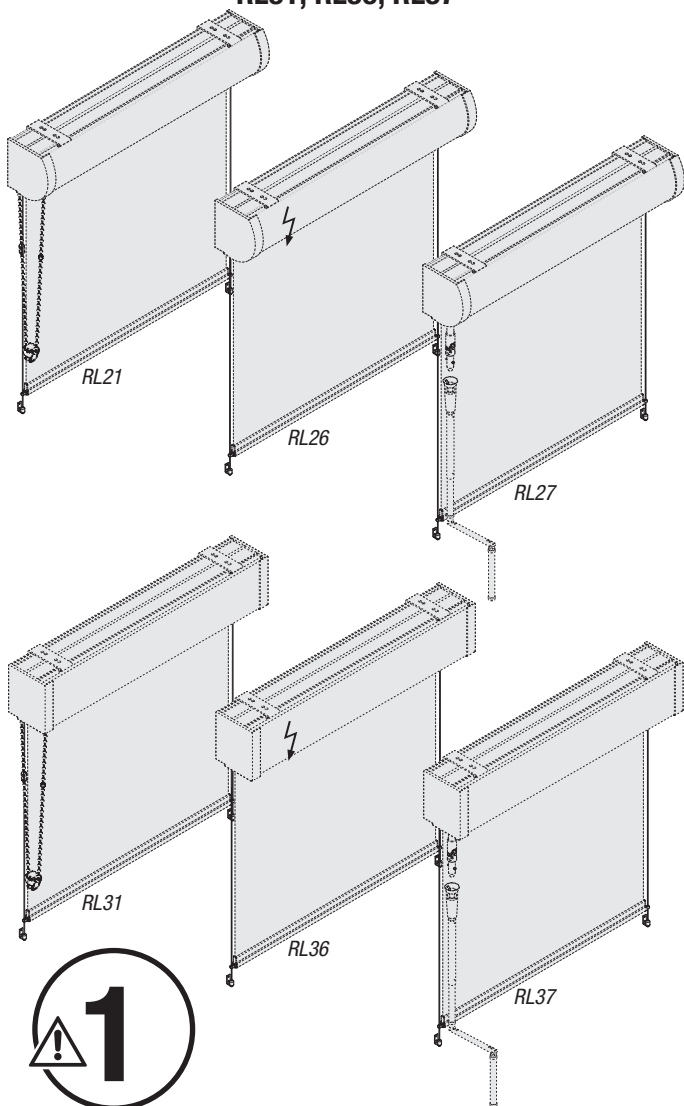

DE Druckfehler, Irrtümer und Änderungen vorbehalten

EN Misprints, errors and changes excepted

FR Sous réserve de fautes d'impression, d'erreurs et de modifications



 
Seite • Page • Page 2–11





1




13

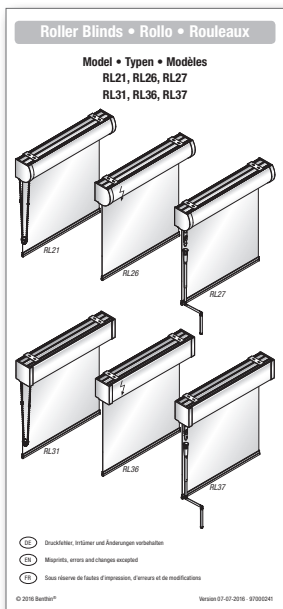

13a

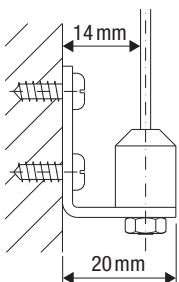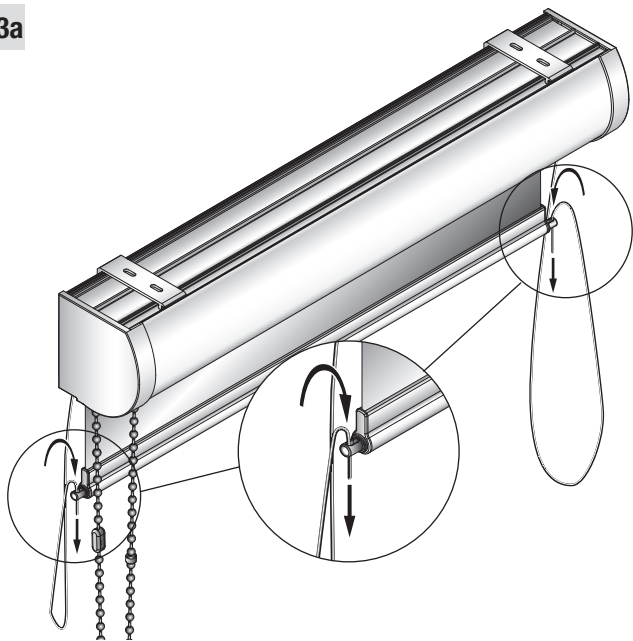  


Seite • Page • Page 5–7

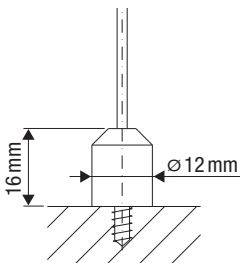 


Seite • Page • Page 8–9

 
13a-1

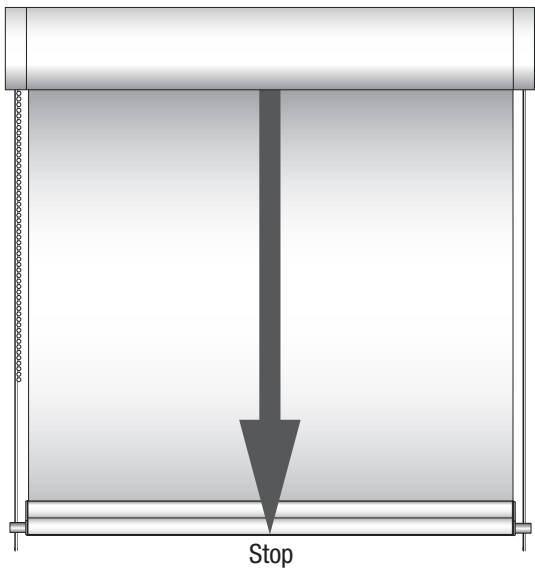


13a-2

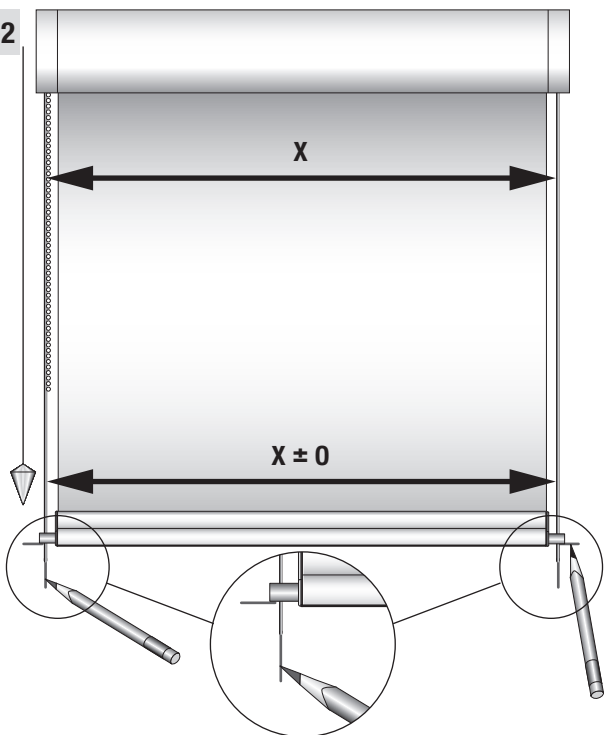 









13a-3

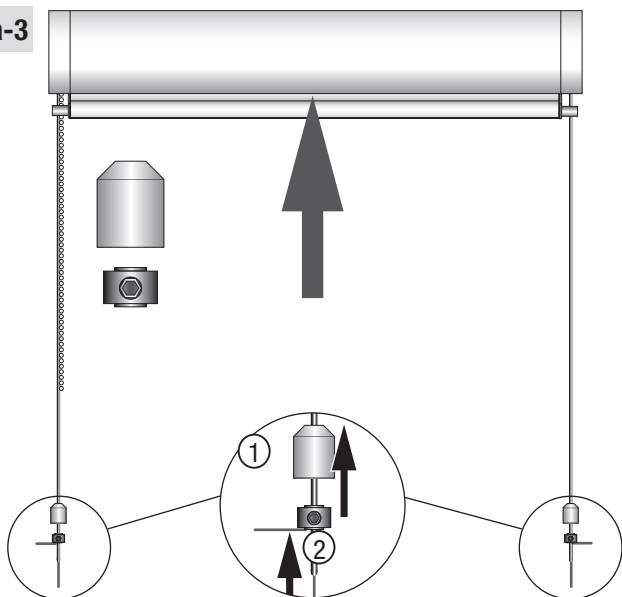 


13a-4

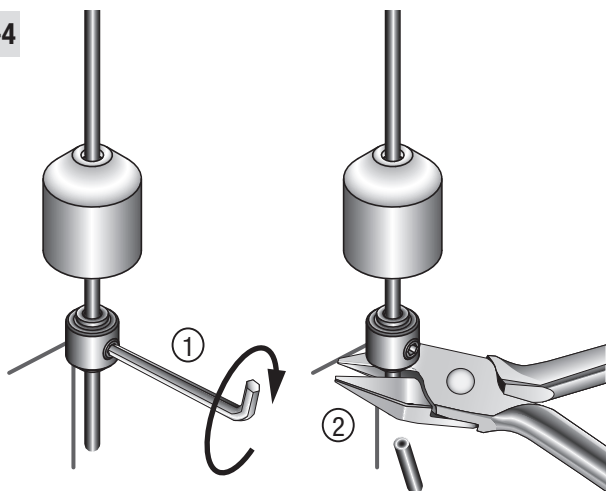 


13a-5

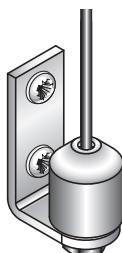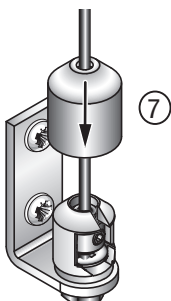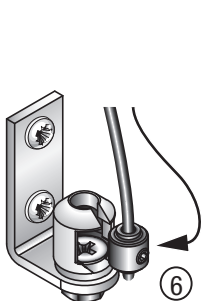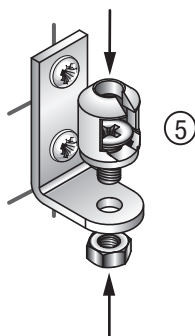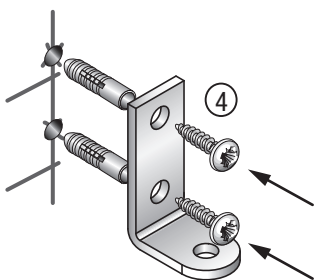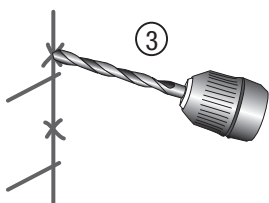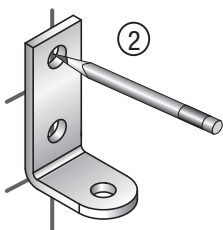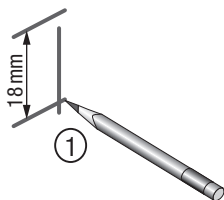        

13b-1

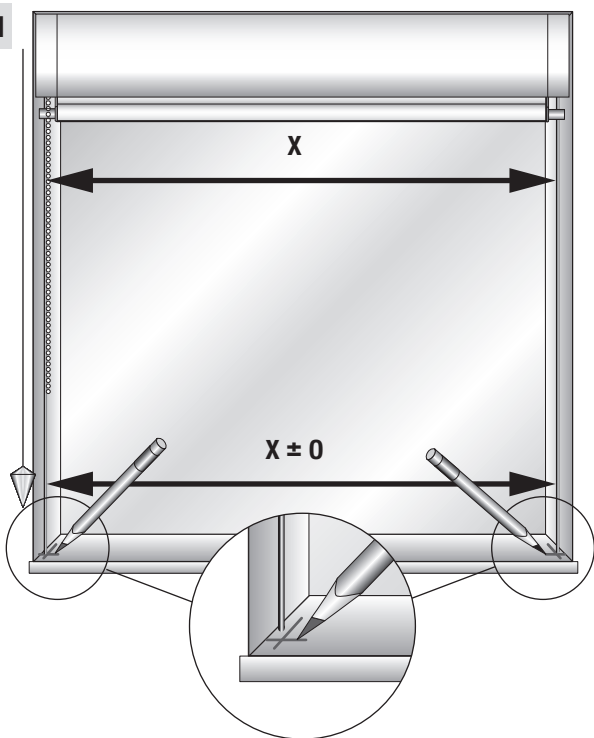 


13b-2

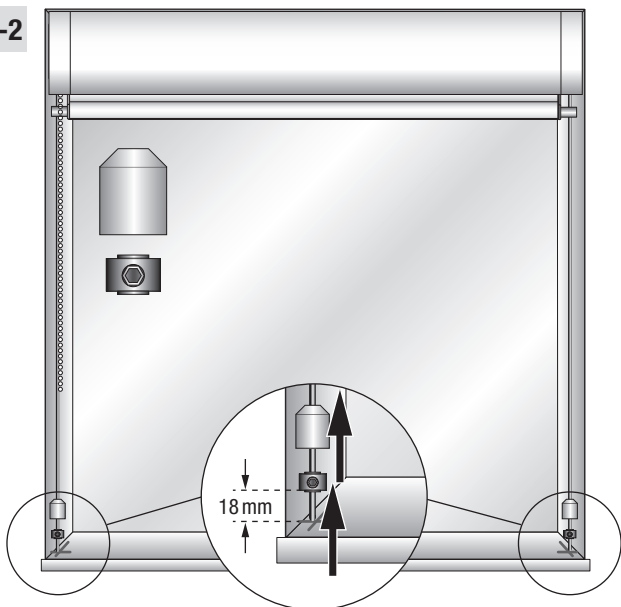 


Montage • Installation • Pose

 13b-3

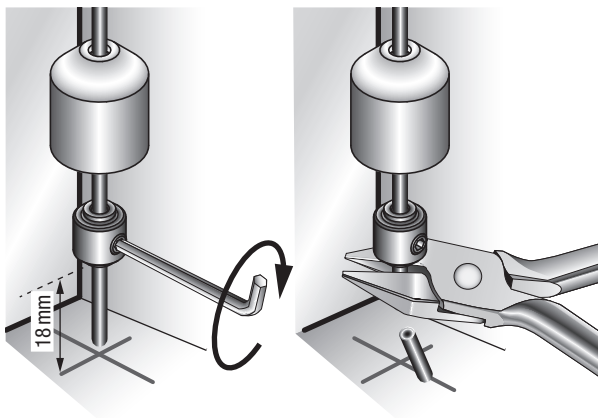

13b-4

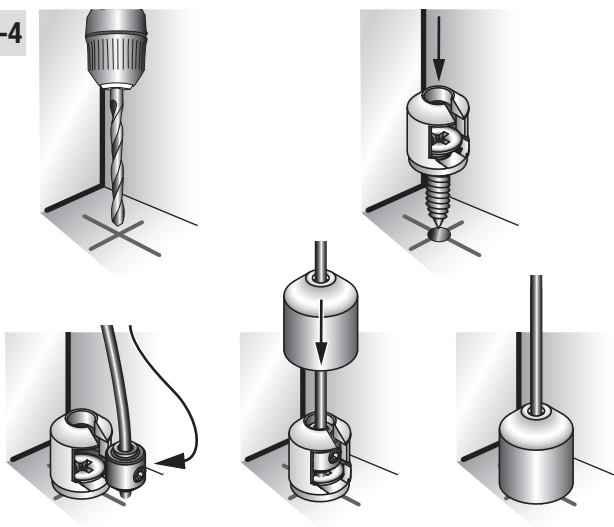 

Seite • Page • Page 12–14

