



Mounting

- d) Lead the pleated blind behind the side channels.
- e) Push the tension cord brackets over the end caps at the bottom.

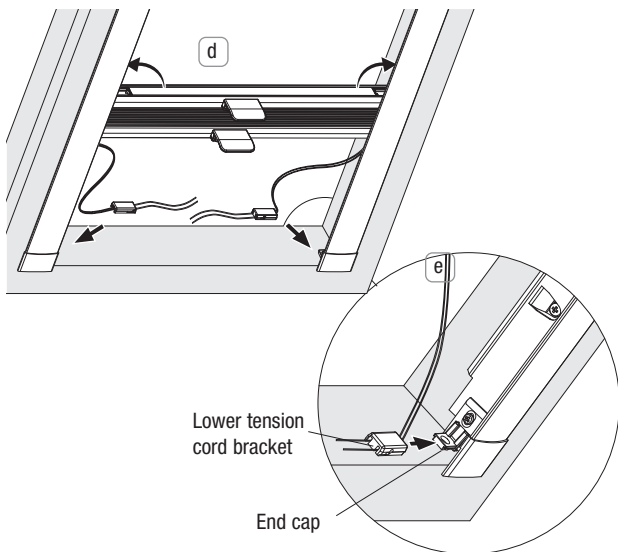

After having checked that the pleated blind functions as prescribed, the excess cord ends can be cut off.

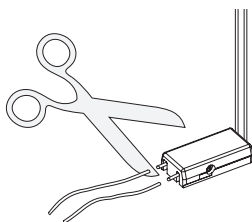

Attention: Adjustment of the cord tension must be uniform and may only be made by a professional.

Care


Thanks to a special manufacturing process, our fabric qualities are furnished with an antistatic finish and are therefore resistant to dust and dirt. Occasional brushing with a soft brush or a feather duster is usually sufficient.

When cleaning glass and the window frame, make sure that no water or caustic cleaning agents come into contact with the pleated blind fabric.


No guarantee can be offered for damage to fabrics that is attributable to condensation, cleaning agents or soiling by insects.

Operation

Pleated blind with stretched cords are operated by use of the finger grip.

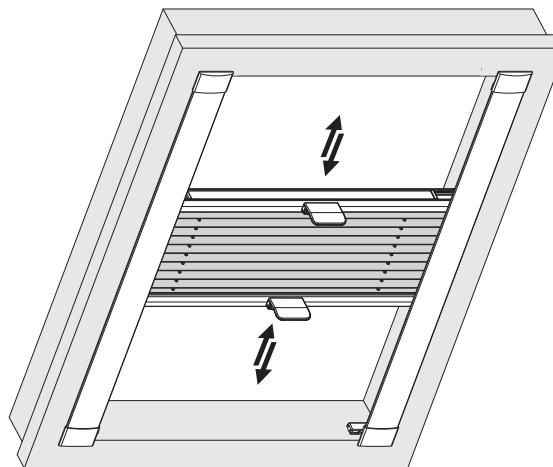


Attach the control rod to the operating handle.

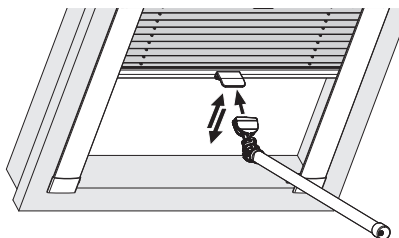


Locking

Click the operation profile over the tension cord bracket.

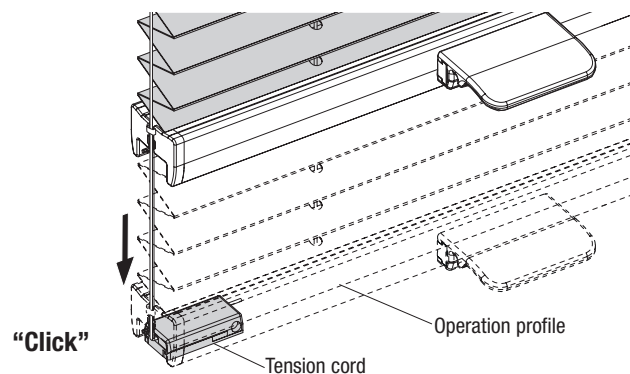

Installation – Operation – Care

Model 2616

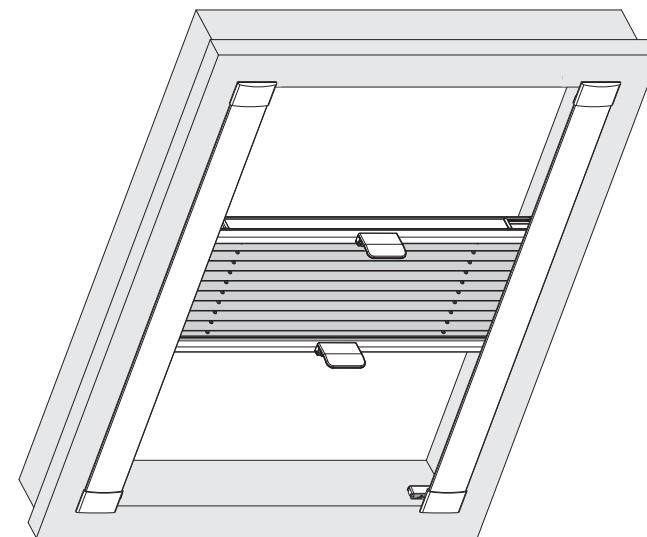

P2616

Dear Customer,

this dimensionally accurate pleated blind was produced especially according to your requirements. High quality materials and a design that is perfect in function and elegance guarantee a long service lifetime and thus ensure great pleasure in the purchased product.

Your pleated blind Manufacturer

Please read this instructions carefully before fitting the blind



Blinds must be fitted by skilled personnel. Wrong installation may result in accidents.


Alterations of the blind must be approved by the blind manufacturer.




No screws for fixing are enclosed.

Always use appropriate screws and plugs suited for the wall or ceiling material where the blind is fitted!

Mounting

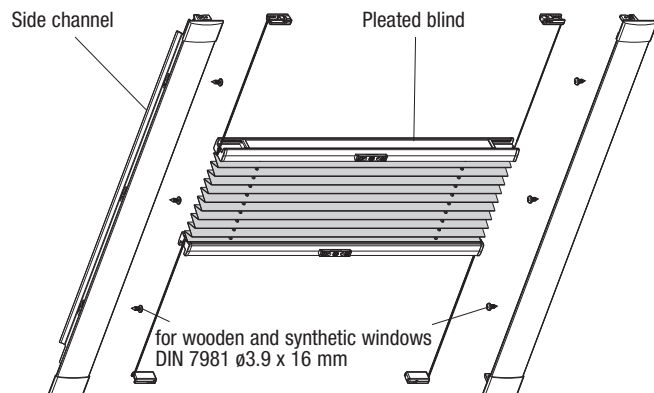


Information: The older window model GGU with 105° mortise requires the spacers supplied to be inserted into the running rail. Place the spacers near the screw.

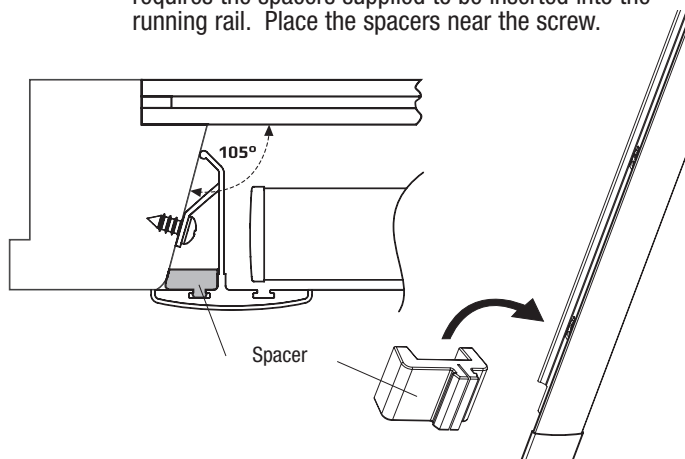

Mounting


1. Mount the side channels

- Place the side channels so that the distance is the same at the top and at the bottom (1). Fix the channels in the window frame (2).
- Straighten the end caps at the top and at the bottom. Loosen the screws (3) and push the end caps to the edge of the window (4). Tighten the screws again (5).

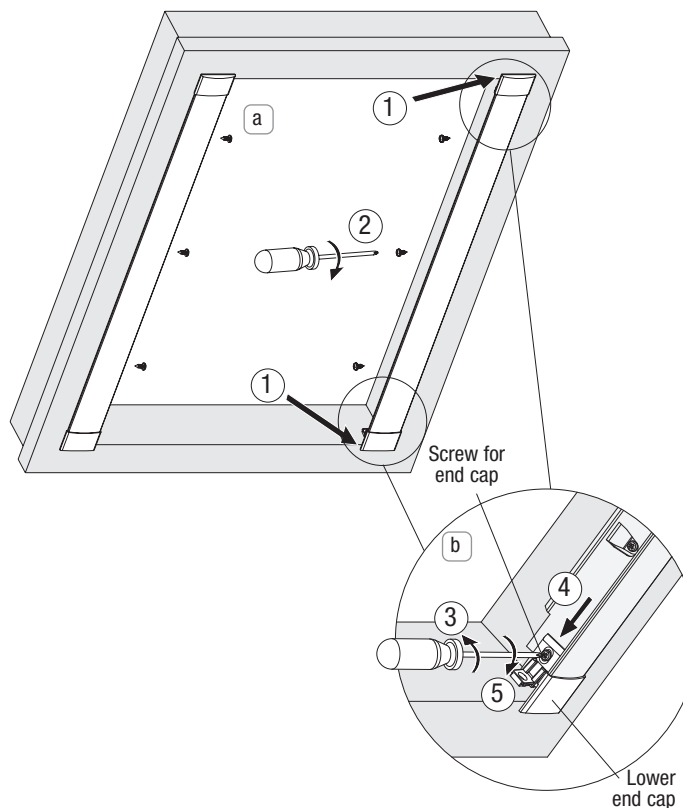

3. Mount the operating handles


Slide both handles sideways onto the adapter.

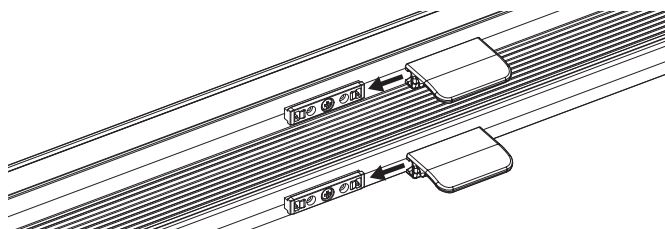


Mounting

3. Mount the pleated blind

- Remove rubber band and unwind the cord incl. tension cord bracket.

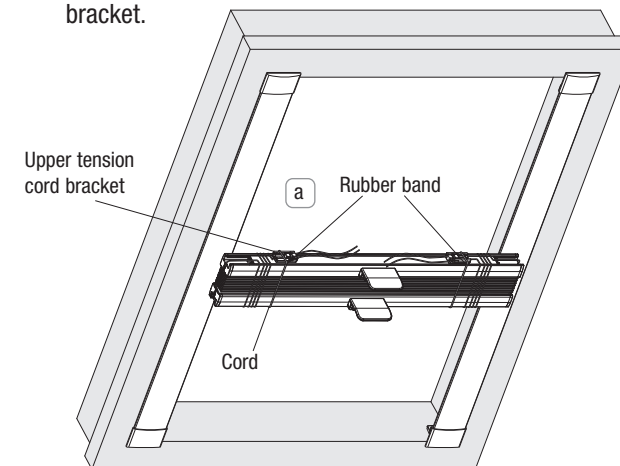

- Push the **upper tension** cord brackets over the fixing plates until they lock.

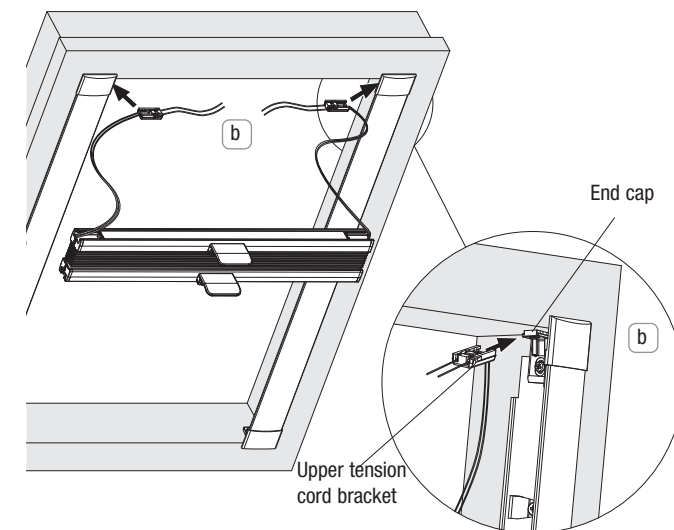

- Take the lower tension cord brackets out of the rail.

